

SPARK RAIN PRO

SF-01

USER MANUAL



CONTENTS

1	PRODUCT INTRODUCTION	A2
1.1	PRODUCT OVERVIEW	A2
1.2	PRODUCT ACCESSORIES	A3
1.3	SPARK FABRICA GRANULE	A3
2	TECHNICAL PARAMETER	A4
3	SCREEN OPERATION GUIDE	A5
3.1	BACK PANEL INTRODUCTION	A5
3.2	MENU SETTING	A6
3.3	STATUS ICONS	A7
3.4	DMX PARAMETER LIST	A7
4	OPERATION NOTES	A8
4.1	WORKING CONDITION REQUIRED	A8
4.2	SAFETY TIPS	A9
5	MACHINE OPERATION	A10
5.1	PREPARATION	A10
5.1.1	INSTALL MACHINE	A10
5.1.2	FILL IN SPARK FABRICA GRANULE	A11
5.2	CONNECT MACHINE	A12
5.3	INITIAL SETTING	A13
5.3.1	SET CHANNEL MODE	A13
5.3.2	SET DMX ADDRESS	A13
5.4	SWIPE RFID TIME CARD	A14
5.5	START TO SPARK	A14
5.5.1	TURN ON CONSOLE'S POWER	A14
5.5.2	TURN ON HEATING FUNCTION	A14
5.5.3	ADJUST SPARKING HEIGHT	A15
5.5.4	SPARK THROUGH REMOTE CONTROLLER	A15
5.6	CLEAR MATERIAL	A16
5.7	CLEAN MACHINE	A16
6	MACHINE MAINTENANCE	A16
7	FAILURE HANDLING	A17

DISCLAIMER

Please read the manual carefully before installing and using this product. Failure to read or comply with this manual may result in injury to products and personnel, and Spark Fabrica shall not be responsible for this.

This product is a professional machine, we do not assume any responsibility for accidents or losses caused by the use or maintenance of this product by personnel without professional training and permission.

If the information contained in the manual or the product specifications are changed, Spark Fabrica will not inform you further and responsible for any errors or omissions.

Our company reserves the right to modify the user manual at any time.

PREFACE

* This manual includes warning, caution and notice concerning the safe operation of equipment. These warningcaution and notice come with the following icons. Please read them carefully!

 WARNING

This warning indicates a dangerous situation that may result in death or serious injury if not avoided.

 CAUTION

This alert indicates a dangerous situation that may result in mild or moderate injury if not avoided.

NOTICE

This means that you need to be careful.


1. PRODUCT INTRODUCTION

This product belongs to special effects equipment, only for professional use.

This product belongs to the cold fireworks simulation special effects equipment, using CST technology, heating special metal powder, and sparking silver spark fountain which is safer than the traditional cold fireworks. It has three controllable variables: height, density and duration.

This product is widely used in weddings, concerts, sports events, event meetings and so on. Stimulate your interest and light up your activity.

1.1 PRODUCT OVERVIEW

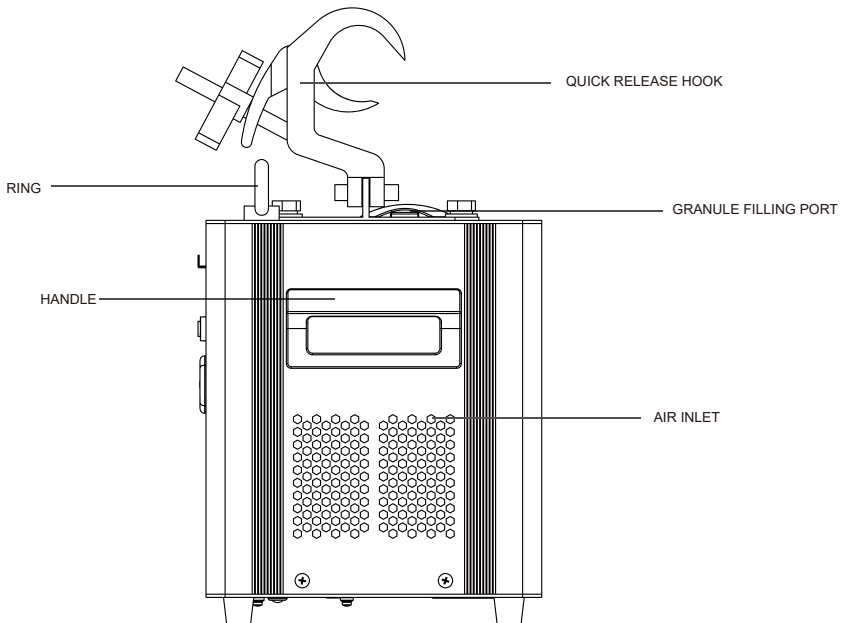

1.2 PRODUCT ACCESSORIES

1.6 Meter Power Plug or 3 Meters Power Pair Cable
3 Meters DMX Pair Cable
User Manual
Safety Rope

NOTICE

Open the package carefully and check to make sure the goods are in good condition.

1.3 SPARK FABRICA GRANULE

A kind of special metal powder with full spark and less residue, no smoke, no odor and no toxic gas while use.

⚠ WARNING


Only the consumables provided by Spark Fabrica are allowed to be used. Spark Fabrica shall not be liable for any machine breakdown, personal injury and property loss caused by the use of consumables not provided by the company.

2 TECHNICAL PARAMETER


Identification	Manufacturer	SPARK FABRICA
	Name	SPARK RAIN PRO
	Model	SF-01
AC Power	Input Voltage & Frequency	100-120V , 60HZ
		200-240V , 50HZ
	Current Limiter Specifications	10A,100-120V / 6.3A,200-240V
	Constant Current	5.5A,100-120V / 2.7A,200-240V
	Power	750W
	Power Input Connector	SEETRONIC
	Power Output Connector	SEETRONIC
	DMX Signal Interface	3PIN
Heating	Heating Time	<5 Minutes
Hopper	Powder Tank Capacity	150g
	Lineary Adjustable Density	Maximum / Moderate / Minimum
Technical Parameters	Adjustable Height	3-8m
	Powder Consumption (100% Output)	17-20g/Minute
	Maximum Single Continuous Duration	30s
Control	Control Protocol	DMX-512
	RFID	√
	SMPTE	MUSIC TRIGGERED
Accessory	Power Plug	SEETRONIC (1.6Meter)
	Remote Controller	Optional
	DMX Cable	√ 3Meter
	Power Cable	√ 3Meter
	Safety Ring	√
	Safety Rope	√
	Bottom Mounting Screw	x
	Software Upgrade Box	Optional
Certification	120ohms Terminal Resistance	Optional
	CE	√
	ROHS	√
Weight	Net Weight	7.8 kg
	Gross Weight (4 Units Flight Case)	48kg
Dimensions	Machine Dimensions - L*W*H	210mm*220mm*340mm
	Size of 4 Units Flight Case - L*W*H	700mm*520mm*450mm
Granule	Granule	Spark Fabrica Granule

3 SCREEN OPERATION GUIDE

3.1 BACK PANEL INTRODUCTION

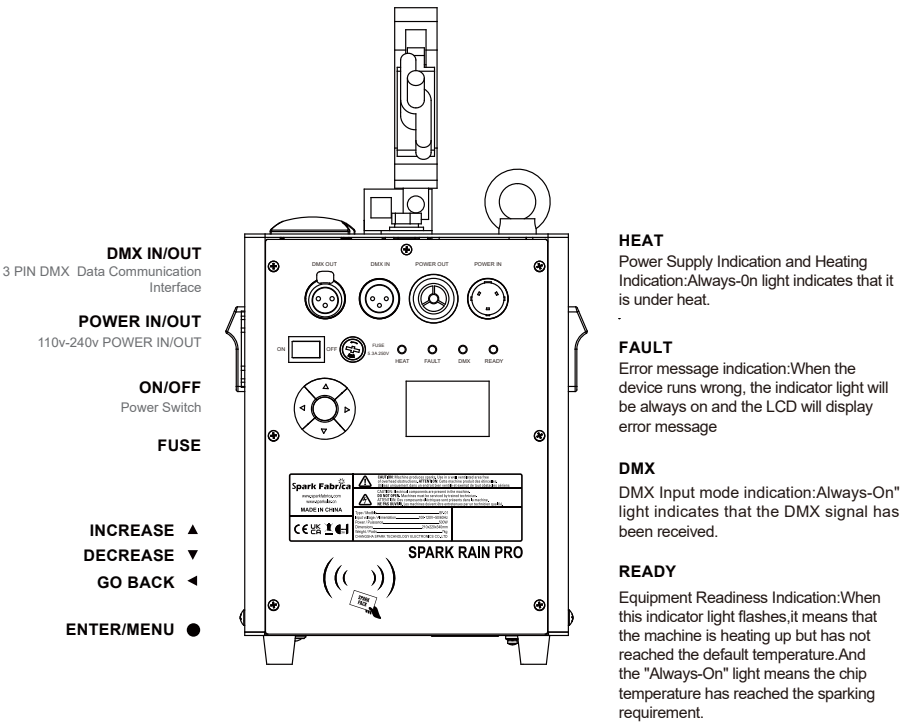

3.2 MENU SETTING

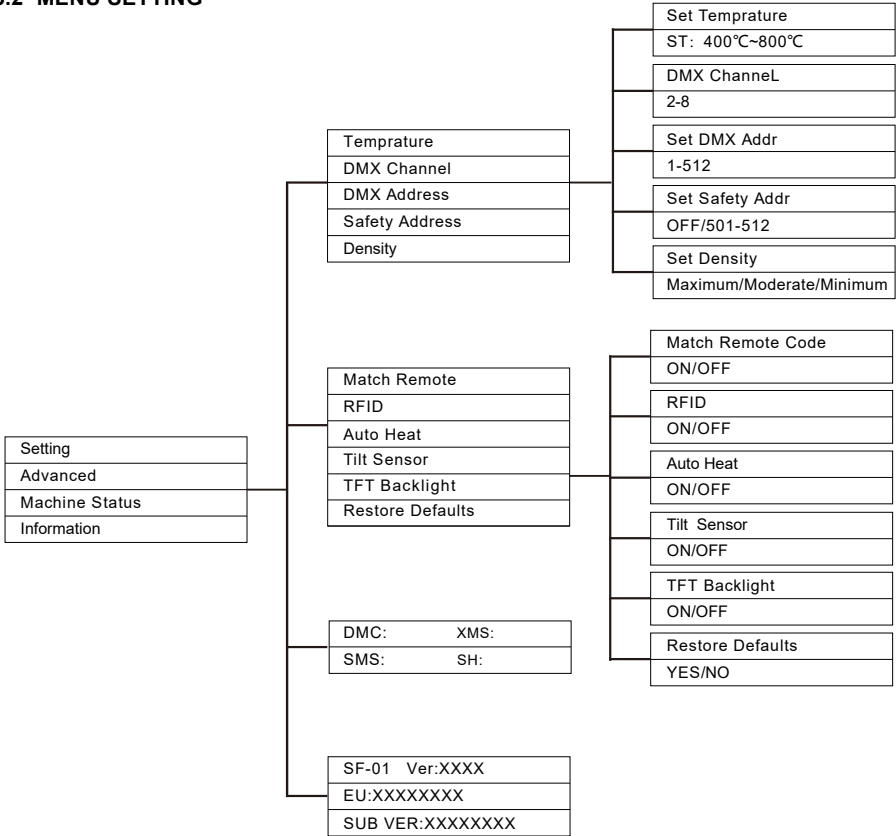

NOTICE

Press <OK> to enter the menu setting. The screen will automatically return to the main state interface with no modification.

NOTICE

Press ▲ key or ▼ key to modify parameters. The parameters will be flash after the modification, and please press <OK> key to save the change.

NOTICE

Press ◀ key to return to previous page.

3.3 STATUS ICONS



	Blower Motor	TS	Temp Sensor Unconnected
	Shaft Motor		Temp Over Heat
	Hopper Motor		Tip Over
	Lack Of Time	2	2 Channel Mode
	PCB Too Hot		

NOTICE

When the icons are green means the machine is working normally, and yellow means abnormal.

3.4 DMX PARAMETER LIST

FIRST CHANNEL	FUNCTION
0~10	Stop
11~255	Fountain Height
SECOND CHANNEL	FUNCTION
0~200	Heat Off
56~200	Clear Material
240~255	Heat On

4 OPERATION NOTES

Please read the following Operation Notes carefully before working with the machine.

4.1 WORKING CONDITION REQUIRED



WARNING

Do not mount the product on a flammable surface (linoleum, carpet, wood, paper, carton, plastic, etc). Make sure there are no inflammable or explosive materials in the using environment.



WARNING

Keep audience or flammable materials at least 10 feet (3 meters) away from the machine, and make sure that debris does not fall on flammable objects.



WARNING

Do not use the machine at temperature above 122 °F (50 °C).

4.2 SAFETY TIPS

⚠ WARNING Always connect the ground wire to avoid electric shock.The machine cannot be submerged in water while operating it.

⚠ WARNING Do Not touch the sparks.During heating up and operation, do not touch the housing.

⚠ WARNING The product is very hot during operation and it remains hot for a long time after operation has stopped. Do not touch or put finger in the output nozzle.


⚠ WARNING The noise level generated from the spark machine unit is estimated at 80dB depending on the point nearest to the machine(s) during operational discharge mode.

⚠ WARNING It is recommended to use the following methods to extinguish the fire: anything similar to sand can be used to cover and put out the fire,and use Class D fire extinguisher for metal material fire.

5 MACHINE OPERATION


5.1 PERPARATION

Install the machine on a firm and level truss, and the maximum tilt angle shall not exceed 15 degrees.

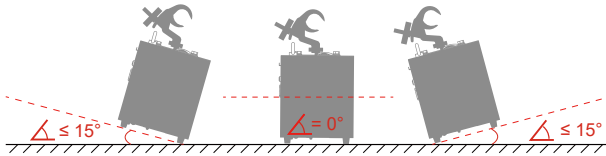

5.1.1 INSTALL MACHINE

Install the product on truss by using the attached accessories.

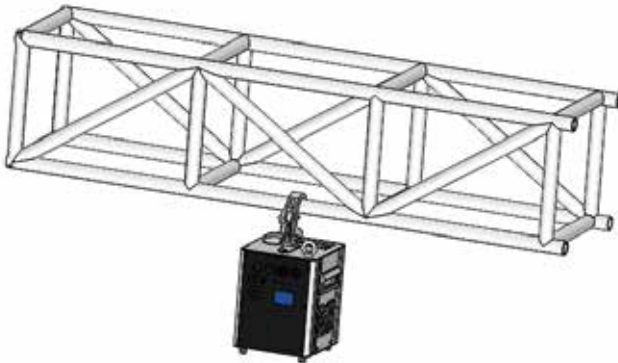

*Specific installation notes please refer to "4 OPERATION NOTES".

5.1.2 FILL IN SPARK FABRICA GRANULE

Spark Fabrica Granule is the consumable specially designed for spark machine, to simulate cold fountain fire-works effect for stage.

- * Tear the vacuum package of granule, and fill in the Spark Fabrica Granule through the granule filling port on the top of the machine.
- * Fill the consumable into the feed port, NOT into the output nozzle.
- * Close the lid securely after filling.
- * The capacity of storage bin is 150g.



⚠ WARNING

Make sure you fill the Spark Fabrica Granule through the feed port on the top of the fixture when power supply is off.


⚠ WARNING

Wear eye protection to avoid eye injury while filling granules and testing spark machine(s).

5.2 CONNECT THE MACHINE

Connect power and DMX signal line.

- * Connect the first machine's power plug.
- * Connect other machines in series with the power cable.
- * Connect other machines in series with DMX connection line.
- * Connect PYRO SIM CONTROLLER or DMX512 controller.

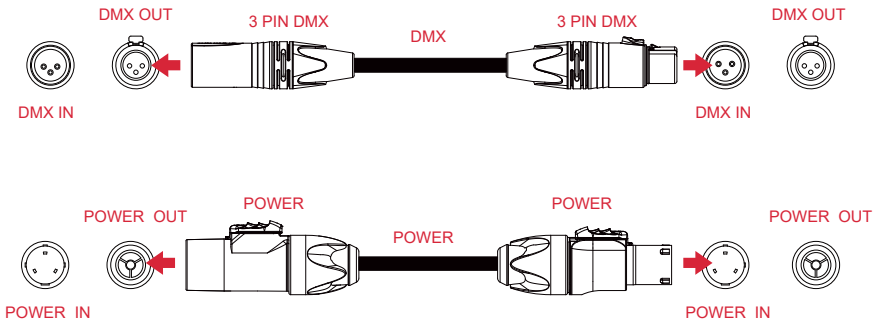

WARNING

Do not use damaged power plug and power cable. One power plug is recommended to connect 4 units in series at most for this product.

5.3 INITIAL SETTING

SETTING	RANGE	DEFAULT
Temperature	400 C -800 C	500 C
DMX Channel	2-8	2
DMX Address	1-512	1
Safety Address	OFF/501-512	OFF
Density	Maximum / Moderate /Minimum	Maximum
Match Remote	OFF/ON	OFF
RFID	OFF/ON	ON
Auto Heat	OFF/ON	ON
Tilt Sensor	OFF/ON	ON
TFT BackLight	OFF/ON	ON
Restore Defaults	YES/NO	NO

- * Turn on power
- * Check the machine status icon(refer to icon introductions of 3.3)

 CAUTION

Not until you ask the professional to check and repair the machine can you use it again.

- * The sparking temperature of the machine is the factory default temperature. The product will heat up automatically when disconnected with DMX signal. Automatic heating function can be set to on or off, and the concrete operation please refer to "3.2 MENU SETTING".
- * When spark machines connect DMX signal, the heating function can be started only on the Sim Pyro Console.

5.3.1 SET CHANNEL MODE

 CAUTION

This machine is in 2-channel mode, please refer to 3.2 Menu Settings for specific operation.

5.3.2 SET DMX ADDRESS

- Please set DMX address according to channel mode:
- *In the 2 channel mode, please set spark machines' DMX address to 1.3.5.7.....

 NOTICE

Please do not set address code repeatedly.

5.4 SWIPE RFID TIME CARD

In order to avoid machine failure or other safety accidents caused by bad-qualified consumables, this product can only be used with special RFID time card.

NOTICE

Each swipe of the card can be recharged for 12 minutes, and each machine can swipe up to 2 time cards for 24 minutes at most. The card can only be swiped again when the remaining time is less than 20 minutes.

NOTICE

If the customer breaks the card swiping function or cancels the card swiping function at the customer's request, no quality guarantee and after-sales service will be provided by Spark Fabrica. Spark Fabrica shall not be liable for any accidents and losses about this.

5.5 START TO SPARK

The machine can be controlled by Pyro Sim Controller console or DMX512 console.

5.5.1 TURN ON CONSOLE'S POWER

5.5.2 TURN ON HEATING FUNCTION

NOTICE

The heating function of the second channel DMX value is 240~255, and it takes about 5 minutes to preheat after turning on.

NOTICE

When heating is turned on, the <HEAT> indicator light on the machine will turn to red, and the <READY> indicator light flashes green to indicate that the machine is heating.

NOTICE

When the <READY> indicator light is always green, it means that the heating is complete and the machine enters the sparking status.

NOTICE

When using the Pyro Sim Controller to control the machines, the screen will display the real-time temperature of each machine. When the temperature value of the control board turns green, it means that the heating is completed and the machine enters the status of sparking.

5.5.3 ADJUST SPARKING HEIGHT

Adjust sparking height through the first channel, and the height adjustment values is DMX parameter values 11-255.

NOTICE

It is recommended to use the following methods to extinguish the fire: anything similar to sand can be used to cover and put out the fire, and use Class D fire extinguisher for metal material fire.

5.5.4 SPARK THROUGH REMOTE CONTROLLER



Battery : 23VA 12V

Please check the spark machine and remote controller before use.

Step 1: Connect the power supply to the device, start the machine, and pull out the antenna in the remote controller.

Step 2: Hold down the < SET> key until the screen displays :Control Pair code 433M, it means code success.

Note: It is recommended that one remote controller controls up to 3 groups of spark machines at most (the same group should set the same DMX address).

Operate the spark machine after coding

Step 1: Connect the power supply and start the spark machine.

Step 2: Open feed port cover and add consumables.

Step 3: If the DMX console is not connected, the machine will automatically heat up.

When the < READY> light turns green, it means that the heating is complete, and the spark machine enters the spark mode.

Step 4: Press the <1 ON> key to start sparking, the default spark height is the highest height.

Step 5: Press <1 OFF> to end sparking

Step 6: After the show, press < CLEAR> to clear the material, and press this button repeatedly until no sparks are emitted.

Step 8: Turn off the machine, unplug the power, and pour out the remaining consumables.

Step 9: Keep the remaining consumables away from fire and in a dry place.

5.6 CLEAR MATERIAL

This product has the function of cleaning material, which can clean up the heated but not sparked consumables, so as to avoid nodulation in the combustor and machine stuck machine.

NOTICE

Use the cleaning function of the second channel for cleaning, DMX value is 56-200.

NOTICE

This function must be performed at the end of each show.

5.7 CLEAN MACHINE

After clearing material, please clean the machine to extend the service life of the machine.

- * Turn off the machine's power.
- * Remove power connection and DMX signal cable.
- * Use a damp cloth to remove dust and debris from the surface of the machine.
- * Unused Spark Fabrica Granule should be stored in a cool, dry place, vacuum packed in sealed foil bags, and protected from moisture, heat, hot surface, open fire and other ignition sources.

6 MACHINE MAINTENANCE

Some steps are needed to clean and maintain the product for maximum usage.

The recommended procedure is as follows:



CAUTION

After using it for a while, check if there is any consumable accretion inside the nozzle. Do necessary cleaning up if there has some, or it may affect spark performance, even damage the machine.

7 FAILURE HANDLING

ERROR CODE	DESCRIPTION	SOLUTION
System Error E0 Storage Fail	System Error: Storage Fail	Replace main board
Motor Protect E1 M1	Blower motor protection/ disconnected	1.Restart machine to clear alerts,stop operating for 15 minutesuntil temperature return to normal. 2.Check wire connection of motor 3.Replace motor 4.Replace main board
Motor Protect E1 M2	Shaft motor protection/ disconnected	1.Shaft motor clog (perform clean material function manually) 2.Check wire connection of motor 3.Replace motor 4.Replace main board
Motor Protect E1 M3	Hopper motor protection/ disconnectd	1.Hopper motor clog (perform clean material function manually) 2.Check wire connection of motor 3.Replace motor
Temp Sensor E2 Unconnected	Temperature sensor disconnected	1.Check wire connection of femperature sensor 2.Replace Temperation sensor 3.Repalce Main board
PCB Too Hot E3	Main board too hot	Stop operating machine until main board temperature return to normal
Time Remain E4	Insufficient time	Please scan new RFID card
Temp Over Heat E5	Heating protection due to over-temperature.	Stop operating machine until temperature return to normal. Alert will clear off automatically.
Heat Fail E6	Heating process fail	1.Inspect Wire connection of heating board 2.Replace heating coil 3.Replace heating board
Tip Over E7	Tip over alert	Machine will activate tip over protection if the angle is more than 45 degrees. The alert will go off automatically after putting the machine back to normal position.
Sub PCB Unconnected E8	Sub-PCB disconnected	1.Check wire connection of Sub-PCB 2.Replace Sub-PCB 3.Replace Main Board
Illegal Card Machine Locked	Machine locked because of using illegal or copy RFID card.	Using illegal or piratic RFID card will lock the machine. If so ,seller will stop providing warranty and after sale service. To unlock the machine,please contact seller.



CHANGSHA SPARK TECHNOLOGY ELECTRONICS CO., LTD

www.sparkfabrica.com marketing@sparkfabrica.com +86138 7585 1139